

hohner

Esquema de ligação. Conector de 5 pinos MIC5 -Macho.

XXXX-03CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = Canal B Pino 5 = Canal O	XXXX-09CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = Canal B Pino 5 = Canal O/	XXXX-05CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = Canal A/ Pino 5 = N/C
XXXX-02CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = Canal B Pino 5 = N/C	XXXX-08CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = N/C Pino 5 = Canal O	XXXX-01CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = N/C Pino 5 = N/C
XXXX-07CX-XXXX Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = N/C Pino 5 = Canal O/	XXXX-XXB3-XXXX (série BR21) Pino 1 = - 0 Volts Pino 2 = + 5 a 28 Volts Pino 3 = Canal A Pino 4 = Canal B Pino 5 = Canal O	

XXXX-41CX-XXXX
(Absoluto)

Pino 1 = - 0V
Pino 2 = + Vdc
Pino 3 = 4 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-0032-XXXX
(Absoluto)

Pino 1 = - 0V
Pino 2 = + Vdc
Pino 3 = 4 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-4052-XXX
(Absoluto)

Pino 1 = - 0 V
Pino 2 = + Vdc
Pino 3 = 4 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-4152-XXXX
(Absoluto)

Pino 1 = - 0 V
Pino 2 = + Vdc
Pino 3 = 4 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-40CX-XXX
(Absoluto)

Pino 1 = -0 V
Pino 2 = + Vdc
Pino 3 = 40 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-00C2-XXX
(Absoluto)

Pino 1 = - 0 V
Pino 2 = + Vdc
Pino 3 = 0 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-01C2-XXXX
(Absoluto)

Pino 1 = - 0 V
Pino 2 = + Vdc
Pino 3 = 0 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-0052-XXXX
(Absoluto)

Pino 1 = - 0 V
Pino 2 = + Vdc
Pino 3 = 0 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND

XXXX-00C1-XXXX
(Absoluto)

Pino 1 = - 0V
Pino 2 = + Vdc
Pino 3 = 0 a 20mA
Pino 4 = CW/CCW
Pino 5 = GND